

Braglia
CONTRACT

sede legale

Via Giardini Nord n. 20/b
41043 Formigine (MO)
Sede Operativa:
Via Antica n.48
42123 Reggio Emilia (RE)

show room

SCIC s.p.a. • Cucine d'Italia
Via Cremonese, 135/A - Viarolo
43126 Parma (PR)

contatti







info@bragliacontract.com

web

www.bragliacontract.com

**Glamp*

scheda tecnica

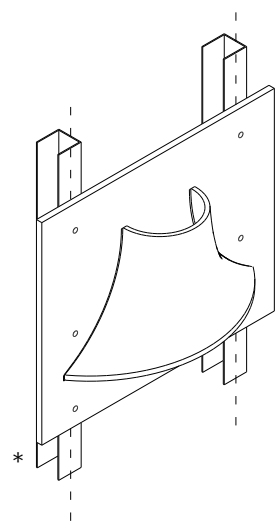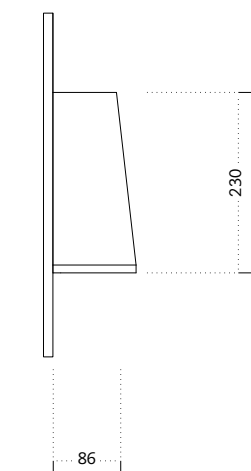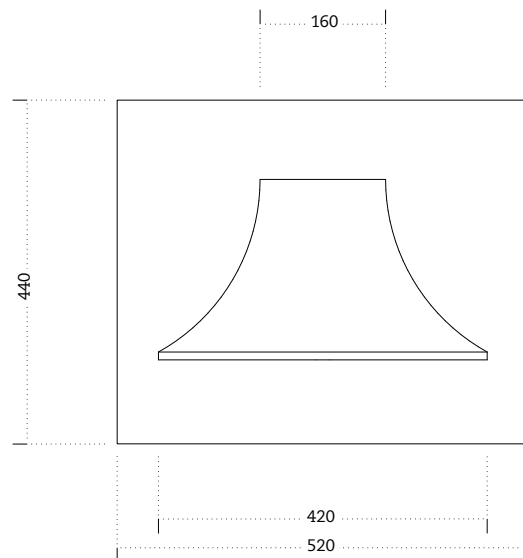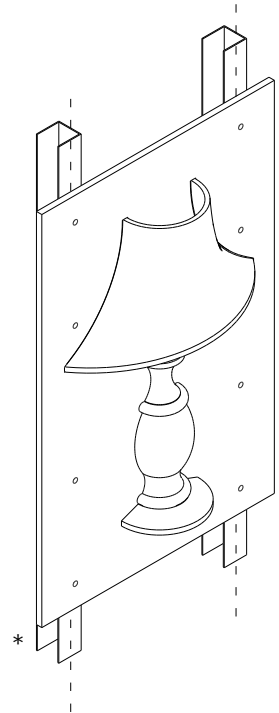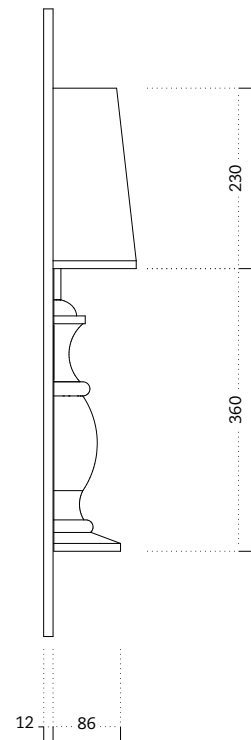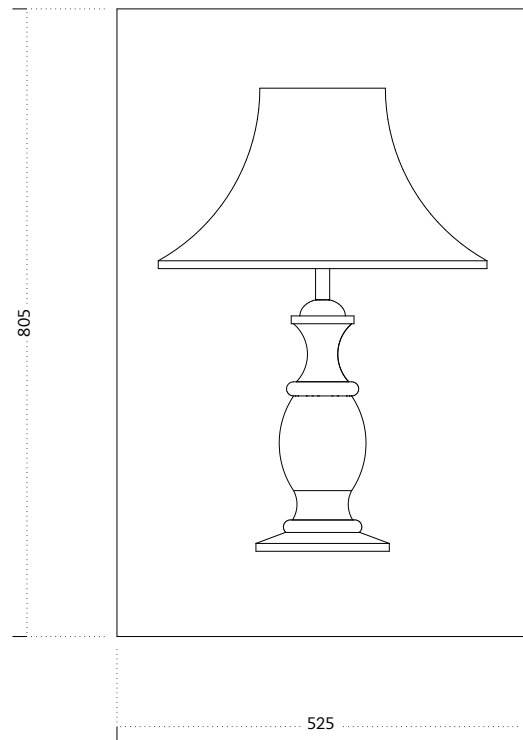

Montaggio su parete o controparete in cartongesso:

1. Preparare nella parete di montaggio un incavo della misura sufficiente a contenere l'intero pannello così da riuscire ad incassarlo;
2. Procedere al collegamento dei fili dopo aver abbassato la leva del salvavita inserendo il filo di fase ed il filo di neutro nell'apposito alloggiamento presente nella morsetteria del portalampada;
3. Posizionare il pannello ed alzata la leva del salvavita verificare che tutto funzioni come desiderato;
4. Procedere al fissaggio dell'intero pannello a parete, evitare lo schiacciamento della morsetteria posta sulla parte inferiore del pannello, utilizzando viti di mm 35 da cartongesso come da scheda tecnica dopo aver eseguito precedentemente i fori e la svasatura sul pannello stesso;
5. Applicare lungo i bordi del pannello tra quest'ultimo e la parete una garza per stuccature;
6. Procedere quindi alla stuccatura del pannello utilizzando stucco a base gesso.

Montaggio su parete tradizionale in muratura:

1. Preparare nella parete di montaggio un incavo della misura sufficiente a contenere l'intero pannello così da riuscire ad incassarlo;
2. Procedere al collegamento dei fili dopo aver abbassato la leva del salvavita inserendo il filo di fase ed il filo di neutro nell'apposito alloggiamento presente nella morsetteria del portalampada;
3. Posizionare il pannello ed alzata la leva del salvavita verificare che tutto funzioni come desiderato;
4. Posizionare il pannello nell'incasso murale, evitare lo schiacciamento della morsetteria posta sulla parte inferiore e procedere all'incollaggio del pannello;
3. Applicare lungo i bordi del pannello una garza e procedere alla stuccatura con stucco a base gesso.

Solo per uso interno (25° C).
L'installazione deve richiedere il coinvolgimento di personale qualificato.

Sostituzione della lampada: prima di procedere assicurarsi di aver spento l'interruttore della luce e che la lampada non sia incandescente. Estrarre dall'apposito alloggiamento la lampada e sostituirla con una delle stesse caratteristiche.

Mounting on Plasterboard Wall or Covering in plasterboard sheets:

1. Prepare a hollow in the dimension to contain the Glamp plaster panel. You'll have to incase it later (see technical details on side);
2. After turning the circuit breaker down, proceed to connect the electric cables. Enter the phase and the neutral wire in the connection block you find in the lamp holder;
3. Arrange the panel and turn the circuit breaker up. Be sure everything works properly;
4. To Fix the Glamp panel to the back structure prepare some holes as indicated in the picture on the left. Be sure every hole is flared to receive the screw. Use 35mm screws for plasterboard panels only, paying attention not to break the terminal block in the lower part of the panel;
5. Apply a glaze for filling along the edges between the Glamp panel and the wall;
6. Proceed with grouting using gypsum plaster;

Mounting on Brick Masonry:

1. Prepare a hollow in the dimension to contain the Glamp plaster panel. You'll have to incase it later (see technical details on side);
2. After turning the circuit breaker down, proceed to connect the electric cables. Enter the phase and the neutral wire in the connection block you find in the lamp holder;
3. Arrange the panel and turn the circuit breaker up. Be sure everything works properly;
4. Proceed with bonding panel in the recessed space. Pay attention not to break the terminal block in the lower part of the panel;
3. Apply a glaze for filling along the edges between the Glamp panel and the wall;

For Indoor use only (25° C).
The installation must require a qualified personnel.

Lamp replacement: Be sure to turn off the light before proceeding taking care the lamp is not burning. Remove the bulb and replace it with one having the same features.



* su parete in cartongesso, posare i montanti della struttura dietro il pannello predisposto rientrando di cm 5 dal bordo verticale in entrambi i lati.

* on a plasterboard wall structure consider 5cm overlap on each vertical side as indicated in the picture on left.